

Dishwasher Quick Reference Guide - LAM8606

 
 
 
 
Register my appliance ✓ www.howdens.com/appliance-registration

Please register your appliance today so you can be contacted easily in the event of important product updates.

1. Scrape all food waste and debris from plates.



2. Load dishwasher as shown.

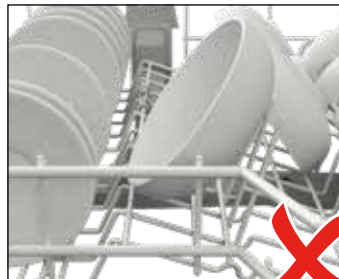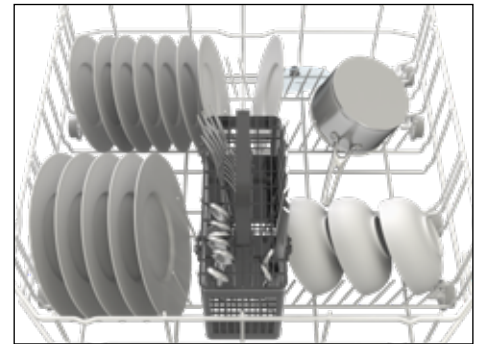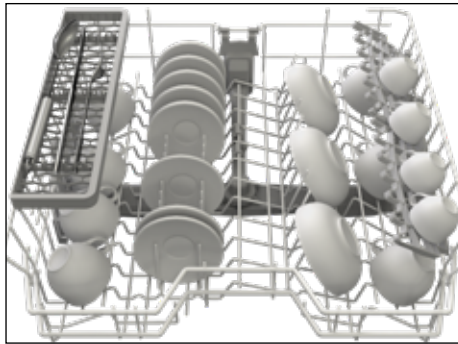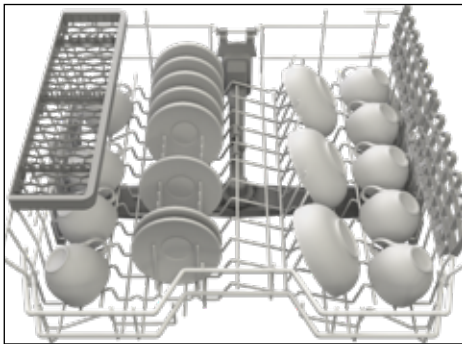


Cutlery points down.

3. Add detergent - powder or tablet.



 4. Turn on and select programme.



5. Check salt and rinse aid - refill if necessary.

 


6. Select option(s) as required.



7. Close the dishwasher door to start programme.

Choose a programme

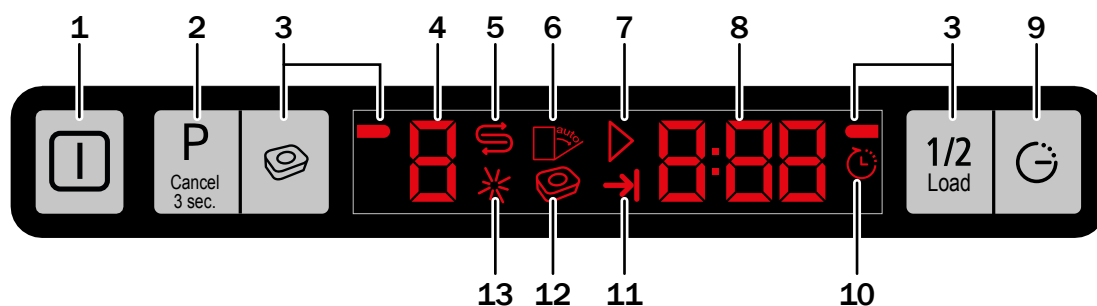

1. Power On/Off

Display illuminates when the power is **On**.
For energy saving, the machine automatically turns off following the completion of the programme or if the programme is not started.

2. Programme Selection/Programme Cancel

Press until the desired programme appears.
The programme will start when the dishwasher door is closed.

To cancel a running programme or time delay function;

- Open the dishwasher door
- Hold for 3 seconds, (countdown 3-2-1), until 0:01 is displayed.
- Close the dishwasher door.
- Wait for 2 minutes until the draining process is completed and an audible warning is heard.
- Power **Off/On** and re-programme.

3. Function Keys

All in one tablet.

Half load.

Use the function keys to select tablet or half load options after selecting the desired programme.

4. Programme Indicator

The programme will start when the dishwasher door is closed.

5. Salt Indicator

Refill salt reservoir when illuminated.

6. Not used

7. Start / Cancel Indicator

8. Programme Time Indicator / Time Delay

Indicator displays the duration of the programme or the time delay before starting the selected programme.

9. Time Delay - 30 minutes to 24 hours.

Press and select the desired time delay before starting the selected programme.

10. Time Delay Indicator

Illuminates and flashes when time delay is selected.

11. End of Programme Indicator

Illuminates when the selected programme finishes.

12. Tablet Detergent Function

Illuminates when the tablet function key has been selected.

13. Rinse Aid Indicator

Refill rinse aid reservoir when illuminated.

Programmes and temperatures.	Cycle selection information.	Degree of soiling	Prewash	Wash	Dry	Time (mins)	+ Tablet option (mins)	+ 1/2 Load option (mins)
P1 eco* 50°C	Most economical washing programme for medium soiled dishes.	Medium	+	+	+	210	238	186
P2 INTENSIVE 70°C	Heavily soiled dishes, pots and pans.	High	+	+	+	120	147	102
P3 NORMAL 60°C	Normally soiled dishes, fast cleaning.	Low - Medium	-	+	+	58	83	-
P4 RAPID 35°C	Lightly soiled dishes that are scraped or pre-cleaned.	Low	-	+	-	30	63	-
P5 PREWASH	Heavily soiled dishes.	High	+	-	-	15	-	-
P0 SELF CLEAN	70°C cleaning cycle. Do not use for washing dishes.					75		

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions.

*Reference programme for testing institutes. The tests in accordance with EN 50242 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme.